


USER MANUAL



Product Name: Lewis BB2

Product Type: Hydraulic Disc Brake Calipers

Usage Explanation:

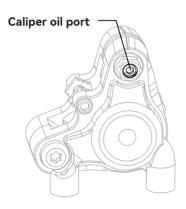

- It is recommended to use a manual transmission or brake lever with a pump diameter of 9-10mm to ensure the best feel. The working clearance of this caliper is large, please squeeze the brake lever several times after installation to adapt it, and add oil in time.
- Please select the brake fluid and brake handle according to the version you purchased, DOT or Mineral.
- During installation, we suggest resetting the caliper piston (clean any dirt if necessary) to effectively avoid disc rubbing.
- Before installation, please remove holding pads from the caliper, insert the included brake pads, and ensure the fixing screws and retaining clips are in place. DO NOT over tighten the brake pad holding screw.
- Our brakes come with a 3 years warranty. If you have any questions or uncertainties, please feel free to contact us.



to thank you for your support of and trust in LEWIS. Now get out there and ride! to access technical information or news on new and exciting products. Lastly, we would like service for everyone. You can follow our various contact methods and multimedia accou email or through after-sales feedback to create an unbeatable buying, riding, and after-sales LEWIS is dedicated to designing and producing components that consistently remain at the forefront of the cycling industry. Through user data combined with our research and test results, we continuously optimize our products to best serve our customers. We sincerely invite users to report any issues they encounter during the use of our products, either via

Safety Information

- procedures stated in the User's Manual Please read and review all information carefully before use and always follow the
- Use caution when using a larger disc brake rotor as it provides a higher braking force
- come in contact with the rotating rotor The disc brake rotor is sharp enough to inflict severe injury to your fingers if they
- grease The brake may not work properly if the brake pads or rotor is contaminated with oil or
- Stop using the brake if the disc brake rotor becomes worn down to it's thickness limit
- If oil leaks occur, immediately stop using the brakes and consult your closest Lewis dealer.
- The wheel may lock if the front brake is applied too strongly, use caution
- Braking distance may be longer in humid or wet weather
- can cause serious injury or even death This brake is designed for downhill or free riding, with higher braking force compared to other brakes. If not familiar with this brake, accidents may occur that
- Inhalation of vapors or mineral oil mist may cause nausea contact with If mineral oil comes into contact with eyes and skin, it may result in irritation. If in eyes, rinse with water and receive immediate medical assistance
- As the brake pads wear out use the bite point adjuster to account for this. Please also note more oil may need to be added to the reservoir.
- DO NOT modify this product, doing so will void the warranty
- Please keep the User's Manual for future reference

Safety Information

Check the following before riding the bicycle.

- Is the brake leaking oil?
- Do the front and rear brakes work correctly?
- Does each brake pad have a thickness of 0.5 mm or more?
- Is the disc brake rotor cracked or deformed?
- Are there any abnormal noises?
- Is the brake lever secure?
- Is the brake lever action smooth and solid?

LEWIS

If you notice any potential problem, please contact the place of purchase or a bicycle dealer




BB2 Caliper Diagram

(12)

14)

(15)

(16)



- It is not recommended for individual users to fully disassemble the caliper. If necessary, please familiarize yourself with the components in the diagram, and use official disassembly videos as a reference. When assembling, remove any old sealing adhesive residue and use new cylinder seal grease for installation.
- When disassembling and maintaining the brake, please use professional tools and cleaning agents. After cleaning, rinse thoroughly with running water to remove residual cleaning agents, and assemble after thorough drying.

Serial No.	Component Name	Quantity
1	Calipers lock screw	1
2	Pad Pin	1
3	Set screw	1
4	O-RING	1
5	Oil plug screw	1
6	Lower Shell	1
7	O-RING	2
8	Piston seal (21)	2
9	Piston (21)	2
10	Upper shell	1
11	Circlip	1
12	O-RING	2
13	Oil hose connector	1
14	Oil hose connector	1
15	Oil hose cone cover	1
16	Connector nut	1
17	O-RING	2

Note: The parts in brackets are titanium alloy parts (The oil hose connector is made of aluminum)




BB2 Caliper Diagram

(12)

14)

(15)

(16)

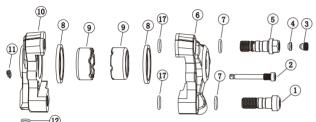

- It is not recommended for individual users to fully disassemble the caliper. If necessary, please familiarize yourself with the components in the diagram, and use official disassembly videos as a reference. When assembling, remove any old sealing adhesive residue and use new cylinder seal grease for installation.
- When disassembling and maintaining the brake, please use professional tools and cleaning agents. After cleaning, rinse thoroughly with running water to remove residual cleaning agents, and assemble after thorough drying.

0 : 111		
Serial No.	Component Number	Quantity
1	CLS16(CLS16A)	1
2	CLS21_SUS(CLS21_TAI)	1
3	CLS14(CLS14A)	1
4	CMF04	1
5	CLS15(CLS15A)	1
6	CBT17	1
7	COX560812	2
8	CMF07	2
9	CHS13(CHS08)	2
10	CBT16	1
11	CTH09	1
12	COX255515	2
13	CJT11(CJT11_LV)	1
14	CGT02	1
15	CZT03	1
16	CLS43(CLS43_LV)	1
17	COX480816	2

Note: The parts in brackets are titanium alloy parts (The oil hose connector is made of aluminum)



ALL FOR CYCLING EXPERIENCE

POWERED BY:



Website: www.lewisbike.com